



2.16 Solar Farm Fence


Style 1

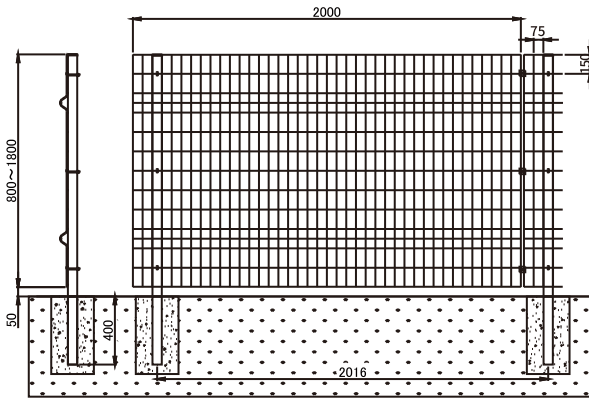


Style 2

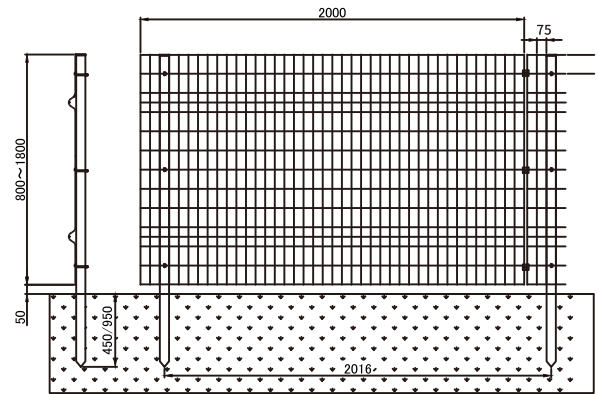


Style 3

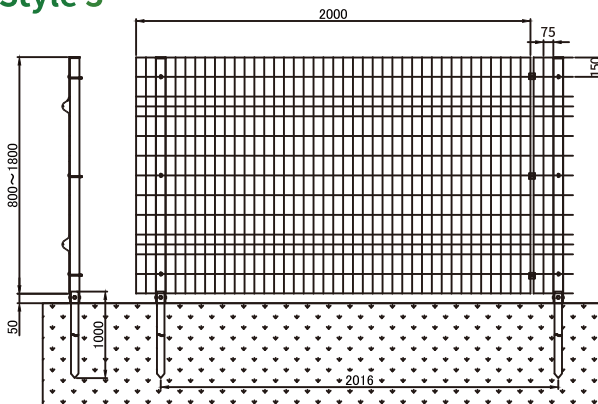


Post installation options

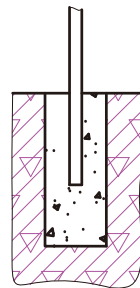

XP-FC-01
Buried

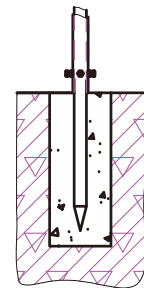

XP-FC-02
Ground screw

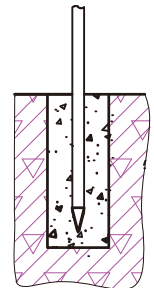

XP-FC-03
Piling

Post installation



1. Drive the ground screw into the soil.



2. Put the post into the ground screw.




3. Adjust the post's height



4. Fasten the post and ground screw with bolts.

Wire mesh connection styles

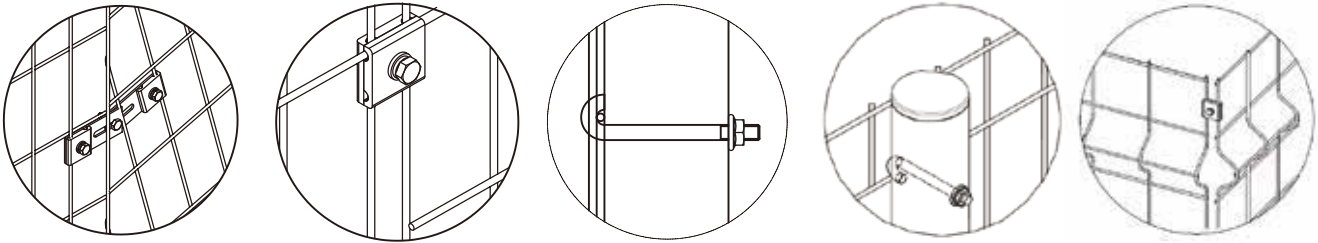

No	Item No	Height	Fence style	Assembly	Post	Wire OD	Base
01	XP-FC-01	800	Half round	Buried	φ48*2.0	φ3.0	Concrete base
02	XP-FC-01	1000	Half round	Buried	φ48*2.0	φ3.0	Concrete base
03	XP-FC-01	1200	Half round	Buried	φ48*2.0	φ3.0	Concrete base
04	XP-FC-01	1500	Half round	Buried	φ48*2.0	φ3.0	Concrete base
05	XP-FC-01	1800	Half round	Buried	φ48*2.0	φ3.0	Concrete base
06	XP-FC-02	800	Half round	Piling	φ48*2.0	φ3.0	Ground screw
07	XP-FC-02	1000	Half round	Piling	φ48*2.0	φ3.0	Ground screw
08	XP-FC-02	1200	Half round	Piling	φ48*2.0	φ3.0	Ground screw
09	XP-FC-02	1500	Half round	Piling	φ48*2.0	φ3.0	Ground screw
10	XP-FC-02	1800	Half round	Piling	φ48*2.0	φ3.0	Ground screw
11	XP-FC-03	800	Half round	Piling	φ48*2.0	φ3.0	Piling post
12	XP-FC-03	1000	Half round	Piling	φ48*2.0	φ3.0	Piling post
13	XP-FC-03	1200	Half round	Piling	φ48*2.0	φ3.0	Piling post
14	XP-FC-03	1500	Half round	Piling	φ48*2.0	φ3.0	Piling post
15	XP-FC-03	1800	Half round	Piling	φ48*2.0	φ3.0	Piling post



Single door



Double doors

